



Sighting in is accomplished as follows: First turn the slotted elevation screw all the way to the bottom. Then rotate it back up one half to one full turn. This screw is not used again except to compensate for lighting or ammunition variables.

The primary sight adjustments are made using the three set screws. First rotate the cam to the #1 position. Use the 1/16" Allen wrench furnished to adjust the #1 set screw to a center hold at 25 yards. This setting generally works well for the 7 and 15 yard positions.

Next rotate the cam to the #2 position and adjust the #2 set screw for a head or neck hold at 25 yards. Last rotate the cam to the #3 position and adjust the #3 set screw for a head or neck hold at 50 yards.

It is very important that the shooter understand that the slotted elevation screw near the rear sight is not a fine adjustment screw but is used only to compensate for changes in lighting or ammunition.

When transporting your target pistol always put the cam in the #2 position for protection.

Your new Aristocrat sight rib is a piece of precision shooting equipment. Like your target revolver, it must be inspected and kept clean to operate reliably. It is recommended the installation of this product be performed by a qualified professional gunsmith.

Aristocrat Products Inc.

1232 E. Edna Place Covina, CA 91724-2509 Tel. (626) 339-4045 Fax (626) 339-4063 www.aristocratproducts.com